

45cm Freestanding Dishwasher



FEATURES

10 Place Settings, 7 Wash Programs,
LED Display with Button Controls, Delay Start Function,
Extra Dry Function, Child Lock,
Slide-out Cutlery Tray

Congratulations on your new InAlto 45cm Freestanding Dishwasher!

THE CONTROL PANEL



- | | |
|--|---|
| <ol style="list-style-type: none"> 1. On/Off button 2. Wash Zone button 3. Delay button 4. Child lock function 5. Rinse Aid indicator 6. Program Ended indicator 7. Water tap indicator 8. LED Display | <ol style="list-style-type: none"> 9. Program indicators 10. Child lock indicator 11. Extra Drying indicator 12. Lower Basket Rack Zone indicator
Upper Basket Rack Zone indicator 13. Program button 14. Extra Drying button 15. Start/Pause button |
|--|---|

STARTING A WASHING CYCLE

1. Load your dishwasher and add detergent to the detergent dispenser
2. Close the dishwasher door and press the Power button, on the control panel, to turn on your dishwasher.
3. Press the Program button to cycle through the various dishwasher programs, to select your desired wash program. The LED will alight alongside the corresponding program selected.
4. Add any additional options to the wash program, including Half Load or Extra Drying.
5. Add any Delay start, if you would like to postpone the wash cycles start by 3, 6 or 9 hours. Simply press the Delay button to cycle through the options.
6. Press the Start/Pause button to start the wash program, using the settings you've selected.

Note: For more information refer to Page 20 of your User Manual.

DETAILS

Dimensions (W, D, H mm): 448 × 600 × 845
Warranty: 3 Years (2 + 1 on registration)

SUPPORT

Telephone: 1300 11 4357
Email: support@residentiagroup.com.au