


# 30cm Ceramic Cooktop

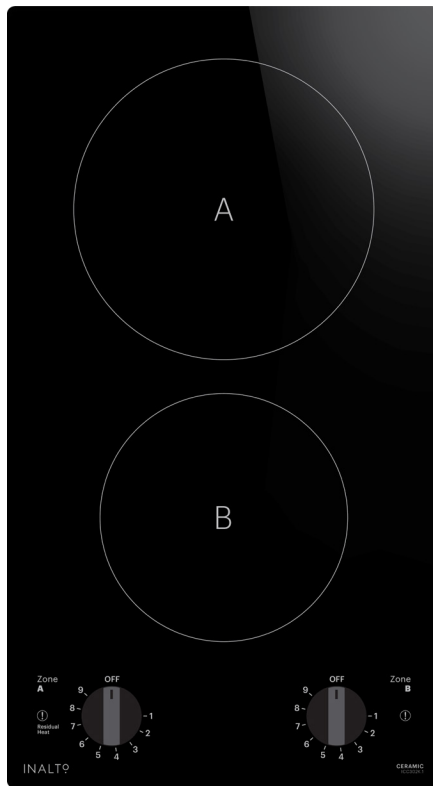


---

## FEATURES

2 Cooking Zones, 9 Power Levels,  
Front Knob Controls, Residual Heat Indicators,  
Durable Ceramic Glass

# Congratulations on your new InAlto 30cm Ceramic Cooktop!

## YOUR COOKTOP

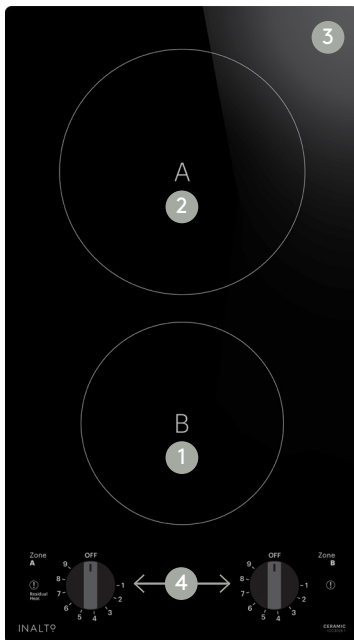

### Legend

1. Zone B Max. 1200 W zone
2. Zone A Max. 1800 W zone
3. Glass plate
4. Knob Controls

## GENERAL USE TIPS

- Do not use cookware with jagged edges or a curved base.
- Make sure that the base of your pan is smooth, sits flat against the glass, and is the same size as the cooking zone. Always centre your pan on the cooking zone.
- Always lift pans off the ceramic cooktop – do not slide, or they may scratch the glass.

## USING YOUR COOKTOP

### To Start Cooking:

1. Place a suitable pan on the cooking zone that you wish to use.  
Make sure the bottom of the pan and the surface of the cooking zone are clean and dry.
2. Use the knob control for your desired cooking zone and turn it to your required temperature. This can be adjusted at anytime during cooking.

### To Finish Cooking:

1. Turn the knob control dial to the "OFF" position.

When the glass plate is hot, the residual heat indicator will be lit. Don't touch the glass plate until the indicator goes out. It can also be used as an energy saving function if you want to heat further pans, use the hotplate that is still hot.

## DETAILS

Dimensions (W, D, H mm): 288 × 520 × 55  
 Built-in Dimensions (W, D mm): 268 × 490  
 Warranty: 3 Years (2 + 1 on registration)

## SUPPORT

Telephone: 1300 11 4357  
 Email: [support@residentiagroup.com.au](mailto:support@residentiagroup.com.au)