

MODEL  
IVDE45W

## VENTED CLOTHES DRYER 4.5KG CAPACITY

### QUICK START GUIDE

INALT<sup>®</sup> CLASSIQUE



## VENTED CLOTHES DRYER 4.5KG CAPACITY

### GETTING STARTED

#### USING THE DRYER

After having set up the Heat Selector and Timer Dial, press the Start button. The dryer will start and work until the program is finished.

NOTE: If during the drying process the door is opened (or power is switched off), the dryer will stop working. In order to restart it, you will need to close the door (or switch the power back on) and then press the Start button. The dryer will then resume operation.


#### OPERATING YOUR DRYER

##### Off

When the 'Drying Timer' dial is in the 'Off' position no power is supplied to the unit. As soon as the dial is turned clockwise to the desired program the dryer will start.

##### Air Dry

This function runs with cool air, primarily to air items that require freshening i.e.: clothes that have been stored for a long period of time.

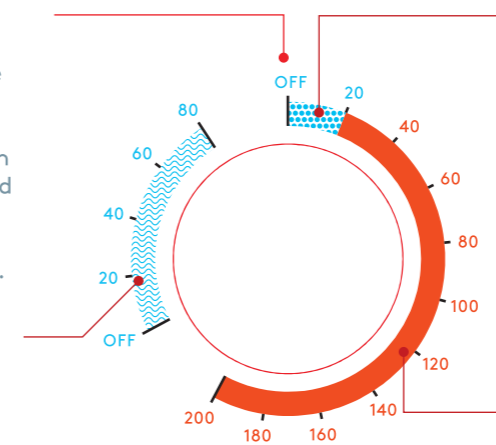

##### Cool

This function is generally used to cool the items that have just been dried. This helps to prevent creasing. Instead of the motor pushing heat into the drum of the dryer it will generate cool air.

##### Hot

For drying large quantities or bulky items (Dryer drum is more than 1/2 full). Set the timer for more than 120 minutes.

For more information please call 1300 11 43 57